



### MONO STRINGER INSTALLATION GUIDE


# A Floor-to-Landing (FL)

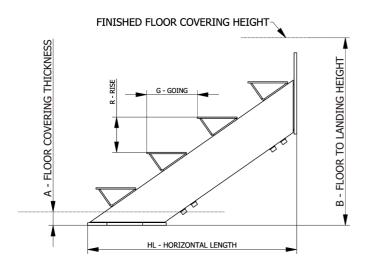

## B Landing-to-Landing (LL)

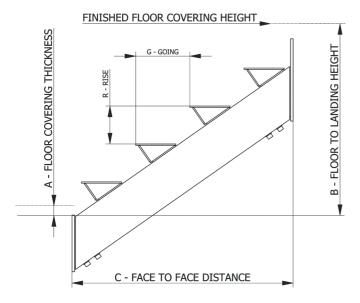

## C Tread Thickness including Nosing

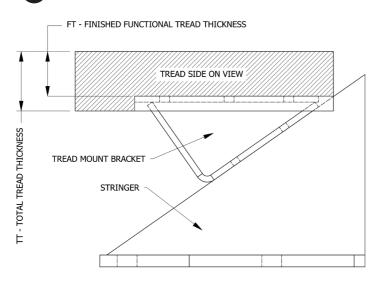



#### **Installation Styles**

Refer to the diagrams to determine which installation style is required for Step 2, and to confirm the functional tread thickness (FT).

#### A Note 1:

Finished Floor Heights are critical to ensure the even spacing of tread risers for comfort, standards compliance and quality appearance.

B Note 2:
Dimension C in figure
2 can be calculated if
dimensions A and B are
known. Contact Galintel

to obtain dimension C and confirm ability to install.


The functional tread thickness (FT) is the distance from the top surface to underside surface not including any nosing or skirting affixed to the front of the tread.

#### **MONO STRINGER**

#### **Installation Guide**

Mono Stringers have been engineered to comply with the National Construction Code when installed in accordance with the following instructions.

For further information visit galintel.com.au

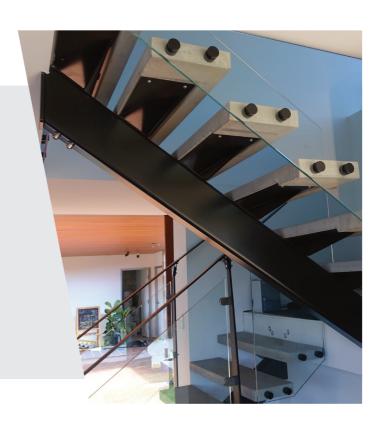

Step 1

Ensure that the top and bottom mounting brackets are square to the Stringer beam. Tighten the four (4) M16 Socket Head Cap Screws to 120 Nm (88 ft/lb).



Step 2 Mark the centreline of the desired stair location.



Set up a level at the top finished floor height.

Step 4 Trim or Fold the provided marking template.

Step 5

Set the template so as the centre line is vertical and the top is in contact with the underside of the level (Step 3).

Mark the four (4) hole centres.
This builder is using a 6mm
Dyna drill to accomplish this.

Step 7

Drill the marked hole the correct size for the desired fixing method. (Minimum M12 fixing for Concrete, and M16 fixing for Timber).



Step 8

If using Chemstuds or Dyna bolts set these at the desired depth.

Step 9 Lift the Stringer assembly into place (it is best to have the unit slightly top heavy).



Step 10 Loosely tighten the top fixings to allow for adjustments of levels and alignments.

Level the top tread whilst ensuring the stringer is in the desired location at both top and bottom. Wedges or spacers may be required depending on the accuracy of the substrate.

Step 12

Drill the bottom holes. In most cases this is achievable without removing the Stringer. On odd occasions depending on the bottom finished floor height the stringer may need to be removed.

Step 13 Once the in the cor

Once the Stringer is levelled in the correct location tighten the mounting bolts to the recommended torques.



Step 14

Fit your selected stair treads.
Speak with your retailer or
architect for recommended
options.

Step 15
Install your selected
Handrail or Balustrade in
accordance with the National
Construction Code.





Australia's largest integrated manufacturer and supplier of galvanised metal products for residential, commercial and industrial buildings.

Proudly Australian Owned.



Information contained in this brochure is supplied in good faith and with the view to assist the user in the correct selection of our products. While every care is taken to ensure that the information contained in this brochure is correct, no warranty is made nor is any condition expressed or implied. As the use of products sold is beyond our control, a condition of purchase is that the purchaser accepts responsibility for ensuring that products purchased are suitable for the intended use. NEPEAN Building & Infrastructure is committed to continual product improvement and therefore reserves the right to change details and designs without notice. All dimensions listed in this brochure are nominal sizes. ^Dual Stringers comply with the requirements of the National Construction Code Volume 2 for Class 1 and 10 buildings Part 3.9.1 when installed with treads at least 50mm thick. The minimum 50mm thick tread is to meet the dimensional requirements of Figure 3.9.1.4 to prevent a 125mm sphere from passing between the treads. © Copyright 2022 NEPEAN Building & Infrastructure [ABN 54 125 224 302]. A division of NEPEAN. [01/2022]

### Ready to Order?

Speak with your local retailer or trade centre to help configure the right solution for your needs.

For more information visit us online at galintel.com.au or call 1800 LINTEL